


Izgled NanoStation5 uređaja



Način povezivanja NanoStation5 uređaja

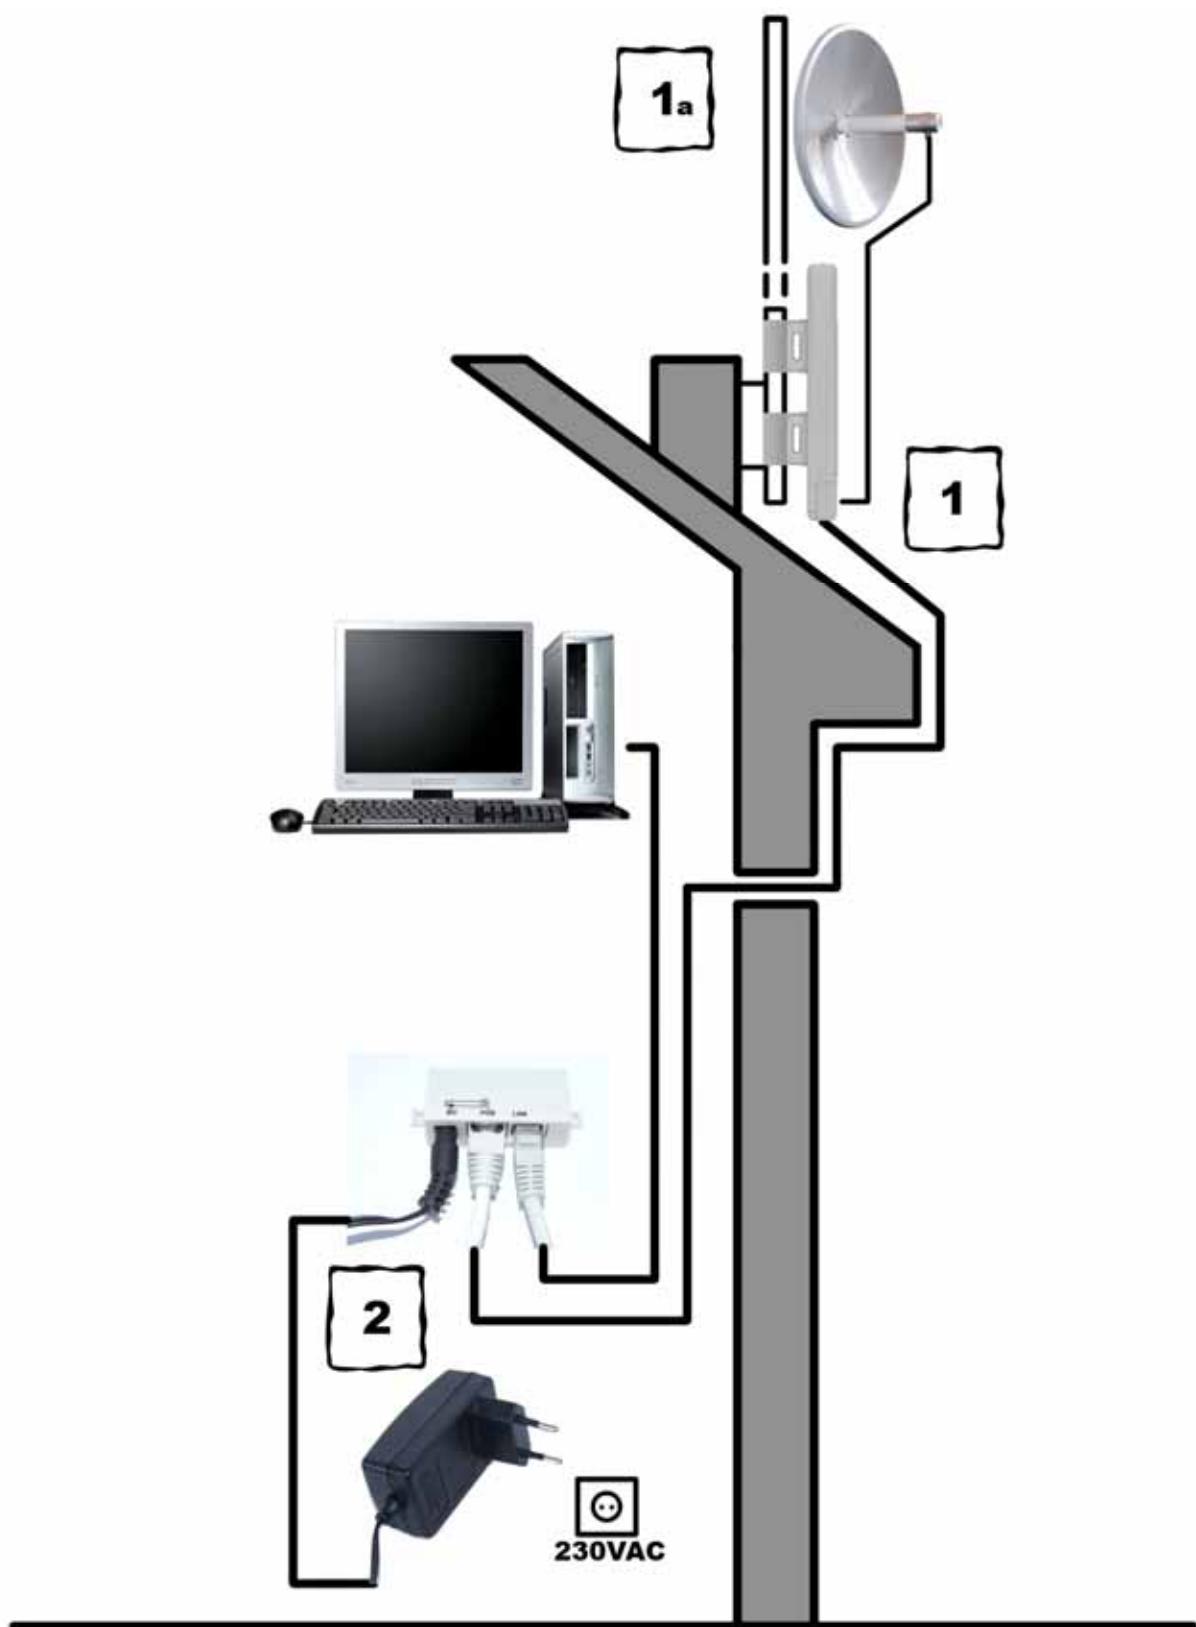

1. Povezivanje UTP kabla na Nano Station 5 na krovu



1a. Povezivanje kabla za eksternu antenu u slučaju da je antena potrebna



2. Povezivanje POE adaptera sa AC/DC, UTP kablovima do krova i kompjuterom
(VAŽNO – bitan je redosled povezivanja)



1.POE adapter



2. Povezivanje UTP kabla koji dolazi od uređaja sa krova



3. Povezivanje AC/DC adaptera sa POE adapterom



4. U utičnicu LAN se povezuje kabl za kompjuter