


Povežite opremu kao na slici:

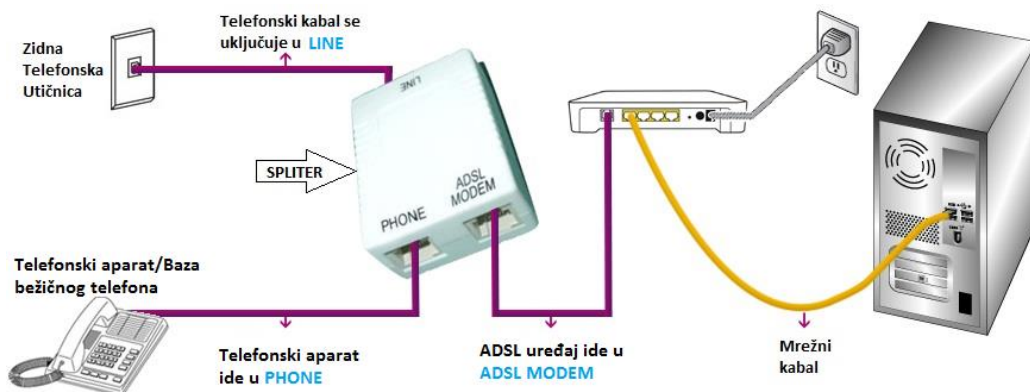

Potrebno je da pristupite ruteru tako što ćete otvoriti pretraživač i u adres bar upisati: **192.168.1.1**. Otvoriće se prozor u kome treba da se unese za username "**admin**" i za password "**admin**". Nakon ovog koraka moguće je podesiti uređaj.

## Podešavanje konekcije

Izaberite u meniju opciju "**Interface Setup**" i podopciju "**Internet**".

Kod opcije "**Virtual Circuit**" izaberite klikom na strelicu "**PVC4**" /sa ovim izborom: **VPI** je **8**, a **VCI** je **35**/

Kod opcije "**ISP**" štiklirajte treću opciju "**PPPoA/PPPoE**"

Otvaraju se opcije:

**Service name** – ostavite prazno

**User name** – upišite Vaš user name /korisničko ime/ sa Ugovra u obliku **username@beotel**

**Password** – upišite Vašu lozinku sa Ugovra (velika i mala slova su bitna)

Kliknite na dugme "**Save**" /ostaće na istoj strani kad sačuva podatke/.

TP-LINK®  
150Mbps Wireless N ADSL2+ Modem Router

Interface | Quick Start | **Interface Setup** | Advanced Setup | Access Management | Maintenance | Status | Help

Internet | LAN | Wireless

**ATM VC**

Virtual Circuit: **PVC4** | PVCs Summary

Status:  Activated  Deactivated

VPI: 8 (range: 0~255)

VCI: 35 (range: 1~65535)

**QoS**

ATM QoS: UBR

PCR: 0 cells/second

SCR: 0 cells/second

MBS: 0 cells

**Encapsulation**

**ISP**  Dynamic IP Address  
 Static IP Address  
 **PPPoA/PPPoE**  
 Bridge Mode

**PPPoE/PPPoA**

Service name:

Username:

Password:

Encapsulation: PPPoE LLC

Bridge Interface:  Activated  Deactivated

**Connection Setting**

Connection:  Always On (Recommended)  
 Connect On-Demand (Close if idle for 0 minutes)  
 Connect Manually

TCP MSS Option: TCP MSS(default:1400) 1400 bytes

**IP Address**

Get IP Address:  Static  Dynamic

Static IP Address: 0.0.0.0

IP Subnet Mask: 0.0.0.0

Gateway: 0.0.0.0

NAT: Enable

Default Route:  Yes  No

TCP MTU Option: TCP MTU(default:1480) 1480 bytes

Dynamic Route: RIP2-B Direction: Both

Multicast: Disabled

MAC Spoofing:  Enabled  Disabled  
00:00:00:00:00:00

**SAVE**

**Podešavanje wireless-a**

Izaberite u meniju opciju "Interface Setup" i podopciju "Wireless".

Kod opcije "SSID" upišite kako želite da Vam se zove wireless mreža.

Kod opcije "Authentication Type" izaberite u meniju "WPA-PSK/WPA2-PSK".

Kod opcije "Pre-Shared Key" upišite lozinku za Vašu wireless mrežu (osam karaktera je minimum).

Kliknite na dugme "Save"/ostaće na istoj strani kad sačuva podatke/.

**Svetlosni indikatori (sijalice)**

⏻ (Power)	svetli	uređaj je uključen
	ne svetli	uređaj je isključen
📶 (ADSL)	ne svetli	nema ADSL signala
	treperi	sinhronizuje se
	svetli	ima ADSL signal
🌐 (Internet)	svetli (sa treperenjem)	uspostavljena internet konekcija
	ne svetli	nije uspostavljena internet konekcija
📶 (WLAN)	svetli	wireless mreža nije uključena
	ne svetli	wireless mreža nije uključena
🔒 (WPS)	svetli	omogućeno upravljanje wirelessom preko WPS-a /ne treba koristiti/
	ne svetli	nije omogućeno upravljanje wirelessom preko WPS-a
🖥️ (LAN 1-4)	svetli	uključen uređaj u taj LAN port
	ne svetli	nema priključenog uređaja u tom LAN portu